



Hood Dishwasher & Utensil Washer Morrisons

Since 1899



Operator to wear PVC or disposable apron and gloves when cleaning the machine.



DAILY


1

Lift up the hood to expose all internal surfaces of washer.

Isolate from the electrical supply.

Empty the machine and **allow to cool**.

Drain the machine.

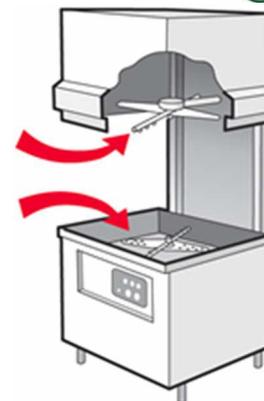

2

On the base and top of the dishwasher are rotating rinse arms.


Check that the spray **nozzles** and **arm end caps** are securely in place. **Note that the washer will not function correctly if any are missing or damaged. If any are missing or damaged then report to department manager.**

3

Unscrew the knurled knob holding the upper and lower washer arms in place.

Remove both the **wash** and **rinse** arms.


Un-block any of the nozzles or jets on the arms.

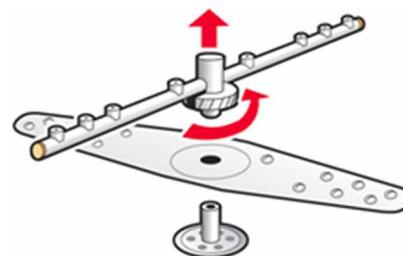

4

Clean the **wash** and rinse arms in **M1** Cleaning Detergent solution, ensure all nozzles and jets are unblocked.

Using a designated cloth and **M1** Cleaning Detergent solution **clean** all **internal** and **external areas** of the dishwasher, ensure all hard to reach areas are cleaned.

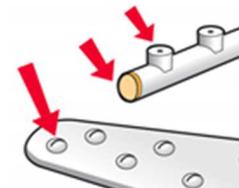

5

Replace the removed rinse and wash arms, ensure that the arms are replaced the correct way round i.e. that the nozzles and jets are facing towards the middle of the washer.

Spray all **internal surfaces** with **M2** Sanitiser solution. **Leave hood up** to allow all internal surfaces to air dry.

